

Intex

Lumo

LED
2500
Lumens
(25W)



WARNING: Read and become familiar with this manual BEFORE operating unit.

Intex Lumo®

Cordless LED Worklight

2500 Lumens

Product Description:

Designed for portable cool non-glare illumination and built TradeTuff® for the most demanding worksite conditions. Features advanced Chips-On-Board technology, delivering true representation of colours, optimised colour temperature and even beam patterns, improving lighting effect and efficiency.

Intex Lumo® Operation:

1. To turn on the Worklight press the Power dial **(Figure B)** for 2 seconds.
2. Adjust the brightness by rotating the stepless Power dial clockwise to increase and anticlockwise to dim (10%-25%-50%-75%-100%).
3. To turn off the Worklight press the Power dial for 2 seconds.



Setting up USB Output:

1. To connect a device press the Settings button **(Figure A)** twice to switch on the USB output.
2. Connect the device via a suited USB cable inserted into the device and Worklights USB output dock.
3. To disconnect a device press the Settings button for 2 seconds to switch off the USB output.

SLB2500 Specifications:

Lumens (lm)	250-2500
Watts (W)	25
Voltage (V)	AC100-250V/50-60HZ
Colour Temperature (K)	5500-6500
Colour Rendering Index (Ra)	CRI>70
Run Time (Hours)	100% Output = 1 / 10% Output = 6
Charge Time (Hours)	1.5
Battery	7.4V/2600mAh
Charging Cable	5m 2*1.0sqmm H05RN Cable + 10A Plug
Water Resistance Rating	IP65
Impact Resistance Rating	IK07
Storage Temperature	-20° to 50°
Working Temperature	-10° to 35°
Weight (kg)	1.35
Dimensions (mm)	226 x 179 x 69
Warranty	12 Months

*AS/NZS 60598.2.5:2015, AS/NZS 61347.1:2016+A1:2018, AS 61347.2.13:2018,
AS/NZS 60598.1:2017, AS 60598.2.4:2019*

Contents:

Cordless LED Worklight
Instruction Manual

Battery Treatment/Charging:

- Charge battery for at least 8 hours before first use.
- Battery indicator: 0~25% first light flashing, 26%~50% second light flashing, 51%~75% third light flashing, 76%~99% fourth light flashing, 100% all 4 indicator lights on.
- Charge indicator: 1 red LED indicator light on to show charging is required.
- Do not leave battery in full discharged condition.
- Recharge Worklight at least once in every 30 days.

Warnings:

- Wear safety goggles whilst operating (user and bystanders).
- Avoid looking directly into the beam.
- Do not use the Worklight near open flames.
- Do not cover the lens whilst operating to prevent overheating.
- Do not contaminate the lens with organic solvents.
- Take care to position the Worklight in a careful manner, ensuring the light is properly supported by the stand.
- When using at a height of 3m or greater, take extra precaution to prevent falling objects causing harm to bystanders and or nearby equipment.



intexinternational.com

Lumo® is a registered Trademark of Intex International
The information contained in this brochure was correct at the time of printing. E&OE